

Liste des véhicules compatibles

<u>Almera N16 (2003 à 2006)</u>	<u>Interstar X70 (2003 à 2010)</u>	<u>Kubistar 76 (2004 à 2008)</u>
<u>Micra K12 (2003 à 2010)</u>	<u>Micra CC K12 (2005 à 2010)</u>	<u>Navara D40 (2005 à 2013)</u>
<u>Note E11 (2006 à 2013)</u>	<u>Pixo (2009 à 2010)</u>	<u>Primastar X83 (2004 à 2008)</u>
<u>Primera P12 (2002 à 2007)</u>	<u>Qashqai J10 (2006 à 2013)</u>	<u>X-Trail T30 (2001 à 2007)</u>
<u>X-Trail T31 (2007 à 2013)</u>		

Modèle	Type calculateur	Nom
Almera N16	ABS	Diagnose ABS - ISO 14230-4 KWP (fast init, 10.4Kb)
Almera N16	Calculateur diesel	K9K 1,5 Delphi - 1,5 DCi
Almera N16	Calculateur essence	QG18 1,8 ISO 14230-4 KWP (fast init, 10.4Kb)
Almera N16	Autre	Diagnose - Smart Entrance
Interstar X70	ABS	Diagnose ABS - ISO 14230-4 KWP (fast init, 10.4Kb)
Interstar X70	Calculateur diesel	G9U 2.5 General
Interstar X70	Airbag	Diagnose Airbag - ISO 14230-4 KWP (fast init, 10.4Kb)
Kubistar X76	ABS	Diagnose ABS - ISO 14230-4 KWP (fast init, 10.4Kb)
Kubistar X76	Calculateur diesel	K9K 1,5 ISO 14230-4 KWP (fast init, 10.4Kb)
Kubistar X76	Calculateur essence	ISO 14230-4 KWP (fast init, 10.4Kb)
Kubistar X76	Airbag	Diagnose Airbag - ISO 14230-4 KWP (fast init, 10.4Kb)
Micra K12	BCM	BCM - ISO 15765-4 CAN (11/500Kb)
Micra K12	ABS	Diagnose ABS - ISO 15765-4 CAN (11/500Kb)
Micra K12	Calculateur diesel	K9K 1,5 Delphi - 1,5 DCi
Micra K12	Calculateur essence	CR12 1,2 ISO 14230-4 KWP (fast init, 10.4Kb)
Micra K12	Calculateur essence	CR14 1,4 ISO 14230-4 KWP (fast init, 10.4Kb)

Micra K12	Calculateur essence	HR16 1,6 ISO 14230-4 KWP (fast init, 10.4Kb)
Micra K12	Autre	IPDM/ER - Intelligent Power Distribution Module Engine Room
Micra K12	Airbag	Airbag - ISO 14230-4 KWP (fast init, 10.4Kb)
Micra K12	Direction assistée	EPS - Electrical Power Direction assistée
Mikra CC FK12	BCM	BCM - ISO 15765-4 CAN (11/500Kb)
Mikra CC FK12	ABS	Diagnose ABS - ISO 15765-4 CAN (11/500Kb)
Mikra CC FK12	Calculateur essence	CR14 1,4 ISO 14230-4 KWP (fast init, 10.4Kb)
Mikra CC FK12	Calculateur essence	HR16 1,6 ISO 14230-4 KWP (fast init, 10.4Kb)
Mikra CC FK12	Autre	IPDM/ER - Intelligent Power Distribution Module Engine Room
Mikra CC FK12	Airbag	Airbag - ISO 14230-4 KWP (fast init, 10.4Kb)
Mikra CC FK12	Direction assistée	EPS - Electrical Power Direction assistée
Navara D22	Airbag	Diagnose Airbag - ISO 14230-4 KWP (fast init, 10.4Kb)
Navara D40	BCM	BCM - ISO 15765-4 CAN (11/500Kb)
Navara D40	ABS	Diagnose ABS - ISO 14230-4 KWP (fast init, 10.4Kb)
Navara D40	Climate Control	HVAC ISO 15765-4 CAN (11/500Kb)

Navara D40	Calculateur diesel	YD25 2,5 DCi
Navara D40	Boite automatique	Diagnose - ISO 14230-4 KWP (fast init, 10.4Kb)
Navara D40	Instrument / Dashboard	General ISO 15765-4 CAN (11/500Kb)
Navara D40	Autre	Diagnose - All Wheel Drive
Navara D40	Autre	
Navara D40	Autre	IPDM/ER - Intelligent Power Distribution Module Engine Room
Navara D40	Airbag	Airbag - ISO 14230-4 KWP (fast init, 10.4Kb)
Note E11	BCM	BCM - ISO 15765-4 CAN (11/500Kb)
Note E11	ABS	Diagnose ABS - ISO 15765-4 CAN (11/500Kb)
Note E11	Calculateur diesel	K9K274 1,5 General ISO 14230-4 KWP (fast init, 10.4Kb)
Note E11	Calculateur diesel	K9K274 1,5 General ISO 15765-4 CAN (11)
Note E11	Calculateur diesel	K9K276 1,5 General ISO 14230-4 KWP (fast init, 10.4Kb)
Note E11	Calculateur diesel	K9K276 1,5 General ISO 15765-4 CAN (11)
Note E11	Calculateur essence	CR14 1,4 ISO 14230-4 KWP (fast init, 10.4Kb)
Note E11	Calculateur essence	HR16 1,6 ISO 14230-4 KWP (fast init, 10.4Kb)
Note E11	Autre	IPDM/ER - Intelligent Power Distribution Module Engine Room

Note E11	Airbag	Airbag - ISO 14230-4 KWP (fast init, 10.4Kb)
Note E11	Direction assistée	EPS - Electrical Power Direction assistée
Pixo	BCM	BCM - ISO 15765-4 CAN (11/500Kb)
Pixo	ABS	Diagnose ABS - ISO 15765-4 CAN (11/500Kb)
Pixo	Calculateur essence	K10B 1,0 ISO 15765-4 CAN (11/500Kb)
Pixo	Airbag	Diagnose Airbag - ISO 14230-4 KWP (fast init, 10.4Kb)
Primastar X83	Calculateur diesel	M9R 2,0 General ISO 15765-4 CAN (11)
Primera P12	ABS	Diagnose ABS (without ESP) - ISO 14230-4 KWP (fast init, 10.4Kb)
Primera P12	Calculateur essence	QG16 1,6 ISO 14230-4 KWP (fast init, 10.4Kb)
Primera P12	Calculateur essence	QG18 1,8 ISO 14230-4 KWP (fast init, 10.4Kb)
Primera P12	Calculateur essence	QG20 2,0 ISO 14230-4 KWP (fast init, 10.4Kb)
Primera P12	Autre	Diagnose - Smart Entrance
Qashqai J10	BCM	BCM - ISO 15765-4 CAN (11/500Kb)
Qashqai J10	ABS	Diagnose ABS - ISO 14230-4 KWP (fast init, 10.4Kb)
Qashqai J10	Calculateur diesel	M1D 2,0 General ISO 15765-4 CAN (11/500Kb)

Qashqai J10	Calculateur essence	MR20 2,0 ISO 14230-4 KWP (fast init, 10.4Kb)
Qashqai J10	Boite automatique	Diagnose - ISO 15765-4 CAN (11/500Kb)
Qashqai J10	Instrument / Dashboard	General ISO 15765-4 CAN (11/500Kb)
Qashqai J10	Autre	Diagnose - All Wheel Drive
Qashqai J10	Autre	Diagnose - Intelligent Key System
Qashqai J10	Autre	IPDM/ER - Intelligent Power Distribution Module Engine Room
Qashqai J10	Airbag	Airbag - ISO 14230-4 KWP (fast init, 10.4Kb)
Qashqai J10	Direction assistée	EPS - Electrical Power Direction assistée
X-Trail T30	ABS	Diagnose ABS/ESP - ISO 14230-4 KWP (fast init, 10.4Kb)
X-Trail T30	Calculateur diesel	YD22 2,2 DCi
X-Trail T30	Calculateur essence	QR20 2,0 ISO 14230-4 KWP (fast init, 10.4Kb)
X-Trail T30	Calculateur essence	QR25 2,5 ISO 14230-4 KWP (fast init, 10.4Kb)
X-Trail T30	Autre	Diagnose - All Wheel Drive
X-Trail T30	Airbag	Airbag - ISO 14230-4 KWP (fast init, 10.4Kb)
X-Trail T31	BCM	BCM - ISO 15765-4 CAN (11/500Kb)
X-Trail T31	ABS	Diagnose ABS - ISO 14230-4 KWP (fast init, 10.4Kb)
X-Trail T31	Calculateur diesel	M1D 2,0 DCi

X-Trail T31	Calculateur essence	QR20 2,0 ISO 15765-4 CAN (11/500Kb)
X-Trail T31	Calculateur essence	QR25 2,5 ISO 15765-4 CAN (11/500Kb)
X-Trail T31	Boite automatique	Diagnose - ISO 15765-4 CAN (11/500Kb)
X-Trail T31	Instrument / Dashboard	General ISO 15765-4 CAN (11/500Kb)
X-Trail T31	Autre	Diagnose - All Wheel Drive
X-Trail T31	Autre	Diagnose - Intelligent Key System
X-Trail T31	Autre	IPDM/ER - Intelligent Power Distribution Module Engine Room
X-Trail T31	Airbag	Airbag - ISO 14230-4 KWP (fast init, 10.4Kb)
X-Trail T31	Direction assistée	EPS - Electrical Power Direction assistée